 
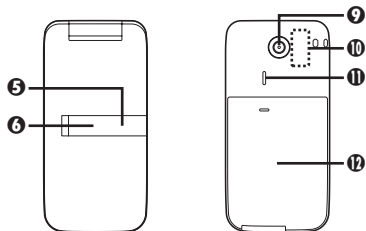 


Parts & Functions

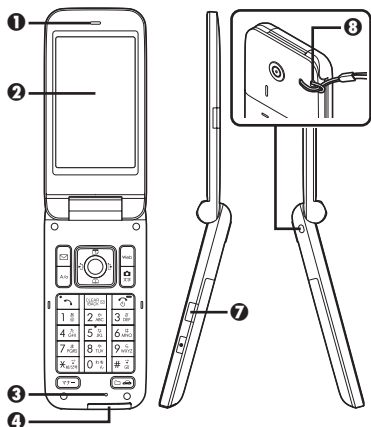

- ❶ Earpiece
- ❷ Display
- ❸ Mic

- ❹ External Device Port (with Port Cover)
- ❺ Notification Lamp
- ❻ Sub-display
- ❼ Infrared Port
- ❽ Strap Eyelet
- ❾ Camera (Lens Cover)
- ❿ Internal Antenna Area
- ⓫ Speaker
- ⓬ Battery Cover

Port Cover

- Close Port Cover after External Device Port use.

Strap Eyelet

 
- Avoid metal Straps; may affect signal reception.

Internal Antenna Area

- Do not cover or place stickers, etc. over Internal Antenna area.

Sub-antenna

- Sub-antenna is attached inside handset (see below). Be careful not to peel it when removing Battery.

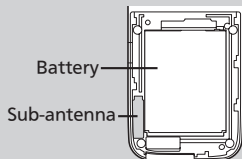

Handset Positions

■ Handset Closed

Keep handset closed when not in use.



 
■ Handset Open

Open handset to place or answer calls, enter text, etc.



Handset Keys

- Keys are indicated in this guide as shown.

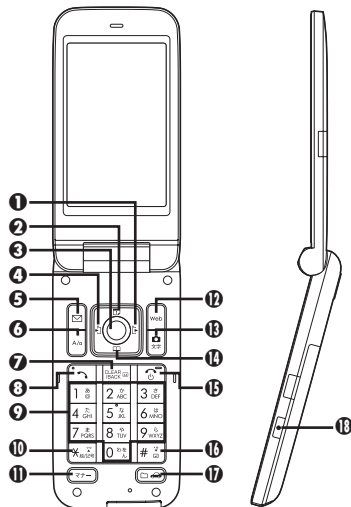

1 Multi Selector (right)

Open Call Log (Dialed).

2 Multi Selector (up)

Open Calendar. Long Press to open Information window.

3 Center Key

Open Main Menu. Long Press to activate/cancel Keypad Lock.

4 Multi Selector (left)

Open Call Log (Received). Long Press to open profile (My Details).

5 Mail Key

Open Messaging menu. Long Press to open E-mail Composition window.

6 Speed Dial & A/a Key

Open Speed Dial/Mail.

7 Clear/Back Key

Play Answer Phone messages. Long Press to activate/cancel Answer Phone.

8 Start Key

Open dial window.

9 Dialpad

Enter numbers. Long Press to open Phone Book.

10 * Key

Enter * and P. Long Press to send Location Information.

11 Mode & Manner Key

Select handset mode. Long Press to activate/cancel Manner mode.

12 Web Key

Open Browser menu. Long Press to access home page.

13 Camera & Text Key

Activate Camera. Long Press to open Camera menu.

14 Multi Selector (down)

Open Phone Book. Long Press to open new entry window.

15 Power & End Key

Long Press to power off.

16 # Key

Enter #. Long Press to activate/cancel Manner mode.

17 Data Folder & Drive Key

Open Data Folder. Long Press to active/cancel Drive mode.

18 Shutter Key

Handset Closed: Toggle Clock view.
Handset Open: Long Press to activate Camera.

Multi Selector

- In this guide, Multi Selector operations are indicated as follows:

	Press or
	Press or
	Press , , or

Battery Installation

About Battery

- Charge Battery at least once every six months; uncharged Battery may die or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace Battery if operating time shortens noticeably.
- Clean Battery terminals and charging terminals with a dry cotton swab, etc.

Lithium-ion Battery

- Handset requires a lithium-ion battery. Lithium-ion batteries are recyclable.



- To recycle a used lithium-ion battery, take it to any shop displaying the symbol to the right.

 


モバイルリサイクルネットワーク
携帯電話やその付属品にのみ有効。

- To avoid fire or electric shock, do not short circuit or disassemble Battery.


Inserting & Removing Battery

1 Remove Battery Cover

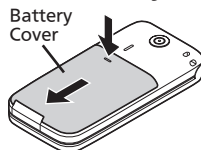


- Press and slide as shown.

 2 Insert Battery

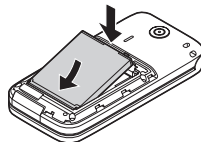

- With logo side facing up, align Battery terminals with contacts.

 
3 Replace Battery Cover

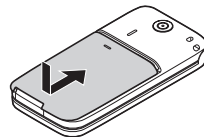

- Position and slide Battery Cover gently as shown all the way.


Removing Battery

 - Power off and lift Battery as shown.

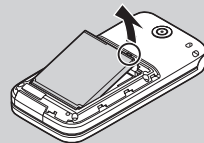

Charging Battery

 
AC Charger is not included in the package; purchase XN-AAWP01 separately.

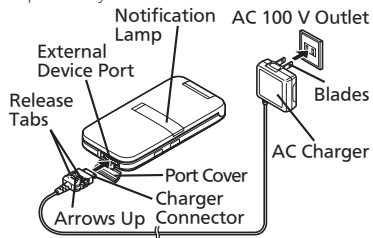

Important AC Charger Usage Notes


- Handset/AC Charger may become warm while charging.
- Retract blades after charging. Do not pull, bend or twist cord.
- Do not use commercial chargers that allow headphone use while charging; may cause malfunction.

 - 1** Open Port Cover as shown

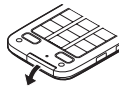

- Close handset after opening Port Cover.

 - 2** Insert Charger connector to External Device Port

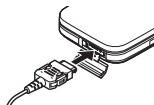


- 3** Extend blades and plug AC Charger into AC outlet



- Notification Lamp illuminates red while charging.
- Notification Lamp goes out when Battery is full.

- 4** Unplug AC Charger and retract blades

 - 5** Remove Charger connector from handset

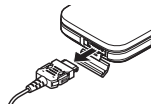

- Squeeze release tabs and pull straight out.

- 6** Replace Port Cover

Power On/Off

Power On

1

 (Long Press)

2

After a while...



- Standby appears.

 
■ When Carrying Handset

Keep handset closed; activate Keypad Lock to prevent accidental operation.


■ Activating Keypad Lock

1


 (Long Press)

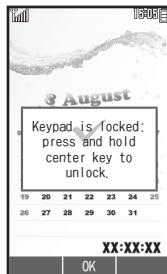

When Keypad Lock is Active

- Handset keys are locked (even for powering off).
- Press  to answer calls; Keypad Lock reactivates after the call.

Canceling Keypad Lock

 (Long Press)

Powering Off

1

 (Long Press)

- After Power Off Graphics, handset shuts down.

Switching Interface Language to English

1  → **設定** →  →  **音・表示**

2 **Language** → 

3 **English** → 

Switching Back to Japanese

 → **Settings** →  →  **Sound/Display**
→ **言語選択** →  → **日本語** → 

Display

Standby

Most operations start from Standby. Indicators appear at the top of Display.

- For more about indicators, see P.1-8.



Information Window

Opens at the bottom for missed calls, new mail, etc.



- Information label (e.g., **Message**) and count appear. Select an item and press to open it.

Opening Unread Information



Display Saving

 
Display goes completely dark after Display Saving time elapses. Press any key (except during a call) to cancel Display Saving and reilluminate Display.

Backlight

- Backlight turns off after Time Out time elapses. Press - to illuminate it (key press may affect active function).
- Display goes completely dark during a call. (Backlight does not turn off first.)

Softkeys

Functions/operations assigned to , , and appear at the bottom of Display.

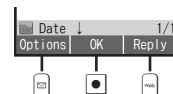

Submenus

- When **Options** appears, press corresponding key to open submenu for related functions/settings.

Main Indicators

Display Indicators

Basic Status



	Signal Strength*
	Battery Strength

* More bars indicate stronger signal.

Function Status

	Incoming Call
	Call in Progress
	Java™ Application Active
	Java™ Application Paused
	Memory Card Inserted
	Accessing Memory Card
	Reading Memory Card
	Formatting Memory Card

Notifications

	Unread Mail
	Unreceived Mail
	Answer Phone Active & Message Recorded
	Answer Phone Canceled & Message Recorded
	Software Update Result
	Memory Card Unusable/ Misinserted

Settings

	Offline Mode
	Answer Phone Active
	Calendar/Task (Alarm Set)
	Calendar/Task (Alarm Unset)
	Alarm Set
	Manner Mode
	Drive Mode
	Original Mode
	Keypad Lock Active
	Ringtone (Silent)
	Vibration Active
	Function Lock (Once) Active

	Automatic Sending of Location Information Active
--	--

Transmissions



	SSL Browsing
	Packet Transmission Active
	Receiving Mail
	Updating Software
	USB Cable Connected
	USB Transmission Active
	Infrared Transmission Active
	Infrared File Transfer

Main Indicators

Sub-display Indicators





 
 
■ Basic Status




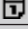

	Signal Strength*
	Battery Strength

* More bars indicate stronger signal.

■ Notifications

	Missed Call
	Answer Phone Message Recorded
	Unread Mail
	Unreceived Mail
	Software Update Available
	Message Delivery Failure


■ Handset Status

	Alarm
	Calendar Alarm
	Task Alarm

Activating Sub-display



Sub-display Clock

- Press  to toggle view.

Accessing Functions from Main Menu



1 



- Main Menu opens.

2  Select menu item → 



- Menu/window opens.
- If submenu opens, use  to select an item and press .


Reverse Navigation

 
- Press . If confirmation appears, follow onscreen prompts.

Returning to Standby

- Press . If confirmation appears, follow onscreen prompts.

■ Tabs


Menus/lists in a single window appear on separate tabs; use  to toggle tabs.

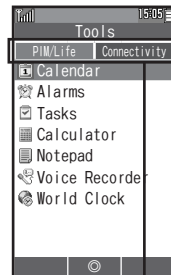

Tabs

Handset Phone Number

 
1

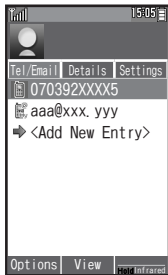

- Handset number appears. (My Details opens.)

 
Editing Profile

1

In My Details,  (select tab)

2

Select item 

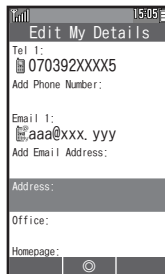

3

Select item   Edit



Mobile Manners

 
Please use your handset responsibly. Take care not to disturb others when using handset.

- Power off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mute most handset function sounds.

- 1  (Long Press)

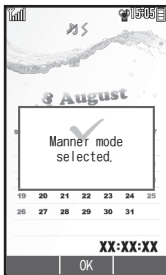


- Manner mode activates.

When Manner Mode is Active

- Ringtones and other sounds are muted.
- Handset vibrates for incoming transmissions, etc.
- Shutter click still sounds at fixed volume.

Canceling Manner Mode

- 1  (Long Press)

Drive Mode


Disable ringtones and Vibration for incoming transmissions. The caller will be notified that you are driving and cannot answer.

- 1  (Long Press)



- Drive mode activates.

Canceling Drive Mode

- 1  (Long Press)

Offline Mode

Suspend signal transmission and reception.

- Handset will be unable to place/receive calls, send/receive messages, access the Internet, etc.

- 1  → **Settings** → 
→  **Network**

- 2 **Offline Mode** → 

- 3 **On** → 

- Offline Mode activates.

Canceling Offline Mode

- 1 After 2, **Off** → 

Security Codes

Handset Code and Administrator Code are required for handset use; save both codes beforehand.

Handset Code	Use or change some functions.
Administrator Code	Required for Reset Settings and Reset All.

- Do not forget Security Codes.
- Do not reveal Security Codes. We are not liable for misuse or damages.
- Guide descriptions are given assuming that Handset Code and Administrator Code are saved.

If Security Code is Unsaved

- Code setup message/window appears whenever Security Code is required.

Incorrect Code Entry

- Message appears for incorrect code entries; retry.

Saving Handset Code

Enter four to eight digits.

1



2



- Locks menu opens.

3



4

Enter Handset Code to save → [Home icon]

5

Re-enter Handset Code to save → [Home icon]

Changing Handset Code

After 3, enter current Handset Code → [Home icon] → From 4

Need/UnNeed Setting

For enhanced security, set Need/UnNeed Setting to **Need**; then Handset Code will be required to delete all files/entries, etc.

- Guide descriptions are given assuming that Need/UnNeed Setting is set to **UnNeed**.

1

In Locks menu, **Handset Code Settings** → [Home icon]

2

Need/UnNeed Setting → [Home icon] → **Need** or **UnNeed** → [Home icon]

3

Enter Handset Code → [Home icon]

Security Codes

Saving Administrator Code

Enter four to eight digits.

1 _____

In Locks menu,
Administrator Setting



2 _____

**Register Administrator
Code** ➔

3 _____

Enter Administrator Code
to save ➔

4 _____

Re-enter Administrator
Code to save ➔

Changing Administrator Code

 
After **2**, enter current Administrator
Code ➔ ➔ From **3**

When Using Internet or Messaging for the First Time

If this is your first use of Internet or messaging, perform online sign-up to establish access to **CLUB AIR-EDGE** (WILLCOM's Internet connection point).

- Online sign-up also provides WILLCOM mail address.
- Transmission fees do not apply.

1

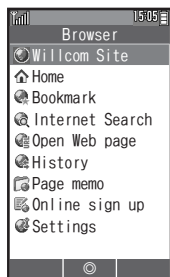

- Browser menu opens.
- Alternatively, press to open Messaging menu and proceed.

2

Online sign up →

- Online sign-up window (Japanese) opens.

3

Complete setup

→ **これで設定を行う** →

- Online sign-up starts. Follow onscreen instructions.

Important Online Sign-up Notes

- Confirm signal strength before starting online sign-up.
- Online sign-up may be unavailable depending on your contract conditions.

Messaging Settings on Server

- After completing first online sign-up, use online sign-up for messaging settings on Server (automatic message retrieval, rejection settings, etc.) as needed. See onscreen instructions for setting items and procedures.



Advanced

⊖ Deleting information provided through online sign-up

In online sign-up window, **Delete**

→ → **Yes** →