


Text Entry Overview

Text Entry Windows


When available, text entry window (such as the one shown to the right) opens while messaging or using Phone Book.

- Unless noted otherwise, descriptions in this chapter are for text entry windows.

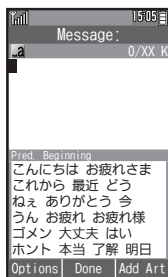

Character Types & Entry Modes

Enter hiragana, kanji, katakana (double-byte and single-byte), alphanumerics (double-byte and single-byte), symbols and pictograms. Switch entry modes as needed.

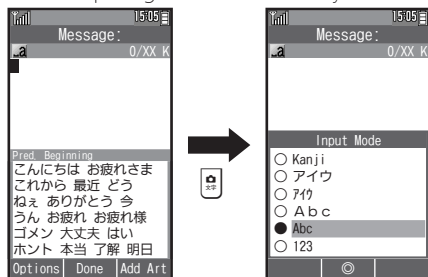

Use to select mode .

Text Entry Basics

Use Dialpad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.




- Press to reverse-toggle options.



Entering Characters Assigned to the Same Key

After entering a character, press or Long Press that key.

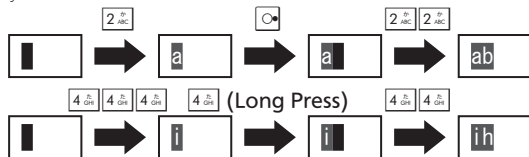

Opening Help




Entering Characters

Hiragana

Enter すずき in Kanji (Hiragana) mode.

- 1
- 3 (す) → ◯
→ 3 (ず) → ✖ (ず)
→ 2 (き)

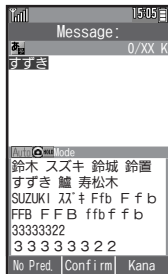


- 2
- ◻ (Confirm)

Kanji

Convert すずき to 鈴木.


- 1
- Enter すずき
- Word suggestions change as hiragana are entered. (Predictive)
 - Long Press ◻ to toggle suggestion mode between Standard, Literary, Spoken and Automatic. (Personal Mode)

- 2
- ◻ → Select 鈴木

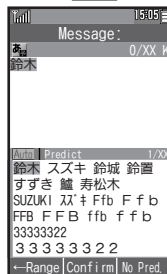

- To exit suggestion list, press ◻.

- 3
- ◻

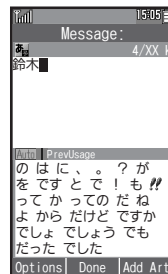

- Words likely to follow the entry appear. (Previous Usage)

Segmenting Hiragana to Convert Separately

Before confirming entry, ◻ or ◻

Toggling Conversion Method

- Before confirming entry, press ◻ to toggle Predictive and Non-Predictive suggestions.

Deleting Words/Phrases from Entry Log

- Enter hiragana → ◻ → Select word/phrase → ◻ (Long Press) → Yes → ◻


Using Various Conversion Methods

Hiragana to Katakana/Alphanumeric Conversion

Enter katakana or alphanumerics in Kanji (Hiragana) mode using key inscriptions.

Example: Enter **PM**

1

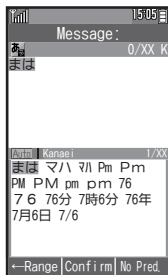

2

Select word/phrase (**PM**)

 


One-Hiragana Conversion

Enter first hiragana and convert it to previously entered kanji.

Example: すずき was previously converted to 鈴木.

1



2

Select 鈴木

Correction Conversion

After mistyping hiragana assigned to the same key (e.g., い instead of う), enter intended word/phrase from suggestion list without retyping.

- Available when three or more hiragana are typed.

1

Type hiragana → Before selecting word/phrase,

- Corrected word suggestions appear.

2


Select word/phrase

Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1

Quick Addr. List

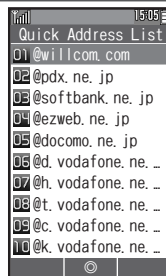

2

Select extension

Editing Characters

Deleting & Editing

Correct また、お願いします to また明日
お願いします.

1

Select character




2



- Highlighted character is deleted.

3

Select target location → Enter characters

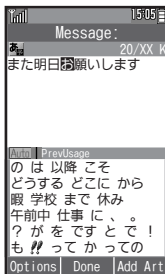

Recovering Deleted Characters

- Press to recover characters deleted with .


Deleting All Characters

- Long Press at text end. To delete characters on and after cursor, select the first character of text and Long Press .

Copy/Cut & Paste

1

- → **Cut or Copy** →
- **Select first character**
-

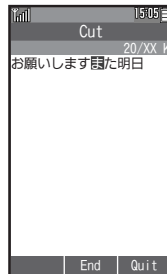

- To cancel and start over, press .

2

- **Highlight text range** →

3

Select target location

➔  (Long Press)



- Text is entered.