

Internet Overview

Access the Internet to browse WILLCOM official site and PC Internet sites.

- For more about Internet services (packet transmission fees, etc.), contact WILLCOM Service Center.



When Using Internet (or Messaging) for the First Time

 
Perform online sign-up to establish access to **CLUB AIR-EDGE** (Internet connection point) beforehand. For details, see P.1-15.

- Online sign-up also provides WILLCOM mail address.




Connection Points

Access the Internet via **CLUB AIR-EDGE** (Internet connection point provided by WILLCOM) or via network of a private ISP, in your office, etc. For details, contact WILLCOM Service Center.

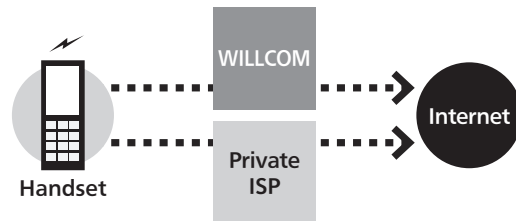


Security

- Handset supports browsing of SSL/TLS-enabled sites. SSL and TLS are encryption protocols that secure transmissions of important/sensitive information, providing a highly secured connection over the Internet.
- When handset connects to the Internet via SSL or TLS (upon opening SSL/TLS-enabled sites),  appears at the top of Display.
 - Certificates are required to access SSL/TLS-enabled sites. Open corresponding certificates on handset and enable/disable them as needed.
 - There is no guarantee of safety on the Internet even when browsing SSL/TLS-enabled sites. We are not liable for any associated damages.

Accessing the Internet

Opening WILLCOM Official Site

 1

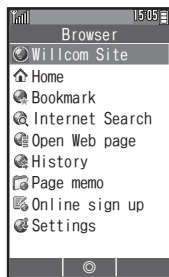

- Browser menu opens.

2

Willcom Site →

- Handset connects to the Internet and WILLCOM official site opens.

3

Select item (link) →

- Corresponding page opens.
- Repeat 3 to open additional links.

4

To end,

- Then, press twice to return to Standby.

Navigating Back/Forward

(back) or (forward)

- Forward navigation is available after opening previous page with .

User Authentication

Enter user ID or password → →

Opening Home

1

(Long Press)

- Page set as Home opens.

Additional Operations

Using History

1

In Browser menu, **History**

→

- History menu opens.

2

Select record →

Confirming Accessed URLs

In History menu, select record →
→ **Address view** →

Entering URLs Directly

1

In Browser menu, **Open Web page** →

2

Enter address →

- Select **Last address** to use URL of last visited page. Select **Input history** to use previously entered URLs.

 
3

Enter URL →

■ Searching the Internet

1

In Browser menu,
Internet Search ➔

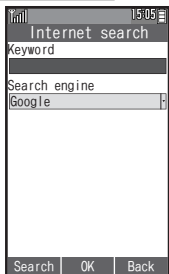

- Internet search window opens.

2

Enter search text ➔
➔ **Select Search engine**
field ➔ ➔ **Select search**
engine ➔ ➔

Browsing Operations

Main Key Assignments

Select Item or Scroll Page	
Navigate Back/Forward (Mobile mode), Select Item or Scroll Page	
Execute Item	
Open Options Menu	
Navigate Back or Exit Browser	
Scroll Down by Page	
Scroll Up by Page	
Navigate Back or Exit Browser	

Browsing Modes

Use the following three modes.

■ Mobile Mode

Pages fit Display width. Use to select items or scroll up/down.

■ Smart-Fit Mode

Pages are restructured to fit Display width. Pointer () is available; use to select items or use to scroll up/down.

■ Desktop Mode

Pages appear in the same layout as on PC. Pointer () is available; use to select items or scroll vertically and horizontally.

■ Switching Browsing Modes

1 In a page,

2 **Browsing mode** →
→ **Select mode** →

■ Using Toolbar

In Smart-Fit mode and Desktop mode, use Toolbar to perform some operations easily.

- Wait one second without operation (pointer changes to) first.

1 While appears,

- Toolbar appears. Use to select an icon and proceed.

Tabbed Browsing

■ Opening New Tabs

1 In a page, select item →
→ **Tab operations** →
• Tab options window opens.

2 **Open in new tab** →

■ Switching Tabs

1 In tab options window, **Select tab** →

2 **Select tab** →

Closing Current Tab

In tab options window, **Close this tab** →

Closing Other Tabs

In tab options window, **Close other tabs** →


Browsing Operations

Switching Frames

In framed pages, select frame as follows.

- 1 In a framed page, 

Viewing Selected Frame

In tab options window, **View**
selected frame → 

Page Operations

■ Updating Page Content

- 1 In a page,  → **Reload**
→ 

■ Jumping to Page Top/Bottom

- 1 In a page,  → **Page operations** → 

- 2 **Jump to** → 

- 3 **Top** or **Bottom** → 

■ Zooming on Pages

- 1 In a page,  → **Page settings** → 





- 2 **Zoom** →  → **Select scale**
→ 

Downloading Image & Sound Files

Saving Linked Files









Save files linked from pages to handset Data Folder.

- Procedure may vary by file type, etc. Follow onscreen instructions.

- 1 In a page, select link → 
- 2 **Download** → 
 - For sounds, select **Open** to play them.
- 3 **Enter name** → 
- 4 **Save here** → 

Saving Files on Current Page

 
Save images, etc. on current page to handset Data Folder.

- 1 In a page, 
- 2 **Page operations** → 
→ **Select object** → 
 - Icons of available files appear at Display bottom.
- 3  **Select file** →  → **Save**
→ 
- 4 **Enter name** → 
- 5 **Save here** → 

Using Bookmarks

Adding Bookmarks

- 1 Open target page → → **Bookmark** →

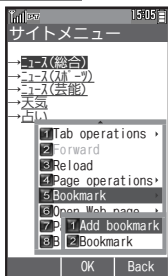

- Bookmark options window opens.

- 2 **Add bookmark** →

- 3 **Check/edit title** → → **Yes** →

Opening Bookmarks

- 1 → **Bookmark** →



- Bookmark list appears.

- 2 **Select bookmark** →

- To open bookmarks in a folder, select a folder and press then proceed.

Opening Bookmarks while Browsing
In bookmark options window,
Bookmark → → **Select bookmark**
→

Managing Bookmarks

Creating Folders

- 1 In **Bookmark list**,




- Bookmark menu opens.

- 2 **Create folder** →

- 3 **Enter name** →


Using Bookmarks

■ Moving Bookmarks & Folders


1 In Bookmark list, select bookmark or folder ➔ 

- Bookmark menu opens.


2 **Move** ➔ 

- To move bookmarks to a folder, select a folder and press .

3 Select target location
➔ 

Moving Up/Down by One Position
In Bookmark menu, **Move up** or **Move down** ➔ 

■ Deleting Bookmarks & Folders

1 In Bookmark list, select bookmark or folder ➔ 


2 **Delete** ➔ 

- Delete options window opens.

3 **Delete** ➔  ➔ **Yes** ➔ 



■ Deleting Multiple Bookmarks & Folders at Once

1 In delete options window, **Delete selected** ➔ 

2 Select bookmark or folder
➔  (appears)

- Repeat **2** as needed.

3  ➔ **Yes** ➔ 

Deleting All Bookmarks within a Folder
In delete options window, **Delete all in folder** ➔  ➔ **Yes** ➔ 

Browser Settings

View

■ Images & Animation

1

☰ → **Settings** → ☐

2

Options → ☐



- Options list appears.

3

View → ☐

4

Images or **Animation**
→ ☐

5

Display or **Do not display**

→ ☐

- Select **On demand** (in Images) to start loading images when image display areas appear.

■ Pointer Navigation

1

In Options list, **Pointer** → ☐

2

ON or **OFF** → ☐

JavaScript & Tables

1

In Options list, **View** → ☐

2

JavaScript or **Tables** → ☐

3

Enable or **Disable** → ☐

Cookies

1

In Options list, **HTTP** → ☐

- HTTP menu opens.

2

Cookie → ☐

3

Cookie mode → ☐

4

Accept all, **Reject all** or
Prompt → ☐

Deleting All Cookies

After 2, **Delete cookies** → ☐ → **Yes**
→ ☐

Electronic Certificates

1 In Options list, **Certificates**



- Certificates menu opens.

2 **Root certificates** or
CA certificates →

3 Select certificate → → 

4 **Enable** or **Disable** →