

Camera Overview

Capture up to 2 megapixel images with built-in Camera.

- Open captured images, send them as mail attachments, and more.



Capture Image



Viewfinder

Viewfinder appears after activating Camera. See below for indicator descriptions.



Important Camera Usage Notes

Keep these points in mind when using Camera.

- Mind etiquette when using Camera.
- Test Camera before shooting special moments.
- Do not use Camera in places where shooting is prohibited.
- Captured images may not be used/transferred without copyright holder (photographer, etc.) permission, except for personal use.
- Clean dust/smudges from Camera area with a soft dry cloth before use.
- Camera is a precision instrument; however, some pixels may remain on/off.
- Capturing/saving images while handset is hot may affect image quality.
- Exposing Camera area to direct sunlight may damage Color Filter and affect image color.

Automatic Shutdown

- Camera shuts down after a period of inactivity and Standby or Camera menu returns.

Shutter Click

- Shutter click and Self-timer sound play at fixed volume regardless of handset settings.

Capturing Images


1 or (Long Press)




- Viewfinder appears.

2 Frame subject on Display → or







- Shutter clicks; captured image window opens.
- To start over, press .

3

- Image is saved; Viewfinder returns.
- To exit Camera, press .

Opening Last Saved Image

In Viewfinder,  → **Review** → 
Sending Images as Mail Attachments
In captured image window,  →
Complete message → 

Main Viewfinder Operations

■ Adjusting Zoom

1 In Viewfinder, or

■ Adjusting Brightness

1 In Viewfinder, or

■ Setting Image Size

1 In Viewfinder,

2 **Picture Size** → → Select size →

■ Selecting Scene Option

1 In Viewfinder,

2 **Scene** → → Select option →

Opening Captured Images


1



- Data Folder opens.

2

Pictures →

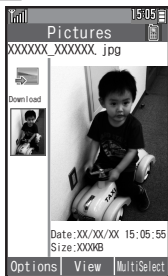

- File list appears.
- To open images in a subfolder, select a subfolder and press .

3

Select image →

- Image appears.
- To return to file list, press .

Handling Open Images

Zoom in	
Open Next Image	
Open Previous Image	
Rotate 90 Degrees Clockwise	

Opening Images on Memory Card

1



- Data Folder opens.

2



Change to MemoryCard →



- Memory Card Data Folder opens.

3

Pictures or **DCIM** →

- To open images in a subfolder, select a subfolder and press .

4

Select image →

Sending Images as Mail Attachments

1

In file list, select image



2

As Message →

- Follow onscreen instructions.