

Data Folder

Supported Files

Files created on handset or obtained from messages or the Internet are organized in folders by file format.

Pictures	Captured or obtained images
DCIM	Captured images saved in DCIM folder
Decorative Pictograms	Pictograms for Decorative Mail
Sounds	Downloaded/recorded sounds
Flash®	Downloaded Flash® animations
Templates	Templates for Decorative Mail
Other Documents	Other files

- DCIM folder is available when Memory Card is inserted.
- Contacts and messages are not accessible from Data Folder; open from Phone Book and Messaging.

Opening Data Folder

1



- Data Folder opens.

2

Select folder ➔

- File list appears.

Using Files

Opening Images

1



- Data Folder opens.

2

Pictures or **DCIM** →



- File list appears.
- To open images in a subfolder, select a subfolder and press .

3

Select image →

- Image appears.
- To return to file list, press .

 
Handling Open Images

Zoom in	
Open Next Image	
Open Previous Image	
Rotate 90 Degrees Clockwise	

Playing Sounds

1

In Data Folder, Sounds →

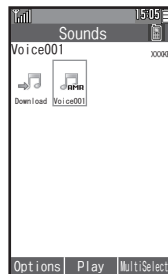

- File list appears.
- To play sounds in a subfolder, select a subfolder and press .

2

 
Select sound →

- Sound plays.
- To return to file list, press .

Attaching Files to Messages

1

In file list, select file →

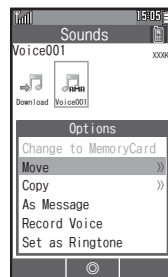

2

As Message →

- Follow onscreen instructions.

Managing Files & Folders

Creating Subfolders

- Not available in DCIM folder.

 
1



- Data Folder opens.

2

Select folder →

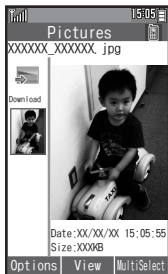

- File list appears.

3

→ **Manage Items** →
→ **Create Folder** →

 
4

Enter name →
• Subfolder is created.

Moving & Copying Files

1

In file list, select file →

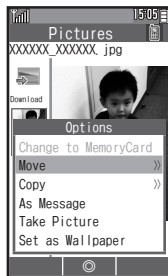

2

Move or **Copy** →
→ **Phone** or **Memory Card**
→

- Some files may not be moved/ copied, or procedure may vary by file. Follow onscreen instructions.

3

Move here or **Copy here**
→

Deleting Files & Subfolders

1

In file list, select file or subfolder →

- When a subfolder is selected, all files within the subfolder will also be deleted.

2

Delete → → **Yes** →

Using Infrared

 
Overview

Wirelessly exchange Phone Book contacts, bookmarks, and profiles (My Details) with Infrared devices.

- Transfer may be unavailable depending on the other device and file content. Some settings may be lost, or transferred files may not be saved properly.

Infrared Precautions

Align Infrared Ports of both devices.

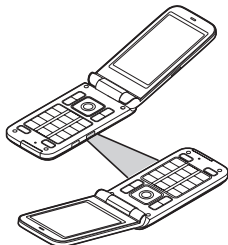


- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during Infrared transmissions. Eyesight may be affected.

Authorization Code

- Four-digit code required for all file transfers via Infrared. Transfers are possible when codes match. (Authorization Code is changeable for each transfer.)

Receiving Files

 1

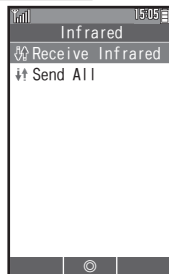

- Infrared menu opens.

 
2



- Infrared activates. Handset receives files if sent within three minutes.

3

When a connection request arrives...

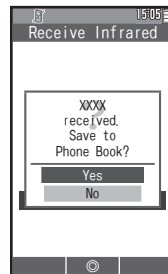

4



- Subsequent operations vary by received file(s). Follow onscreen instructions.

All File Transfer Caution

- For **Delete All & Save**, all corresponding files are deleted before received files are saved.

Sending Files

■ Single File (e.g., Phone Book)

1

☎ → Select contact → ☎



2

Send Entry → ●

3

Via Infrared → ●

- Transfer starts when the other device is ready. When complete, contact search window returns.

■ All Files

1

In Infrared menu, **Send All** → ●

2

Enter Handset Code → ●

3

Select item → ●

4

Enter Authorization Code

→ ●

- Subsequent operations vary by file type. Follow onscreen instructions.

Using Memory Card

Overview

Use microSD/microSDHC Memory Card to save files or back up Phone Book contacts and bookmarks.

Memory Card Cautions

 
- Do not force Memory Card into or out of handset.
- Keep Memory Card out of infants' reach; may cause choking if swallowed.
- Do not touch terminals or expose them to metal objects.
- We are not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of contacts, etc. in a separate place.
- Never power off or remove Battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

Inserting Memory Card

1 Power off

2 Remove Battery (P.1-3)

3 Inserting Memory Card

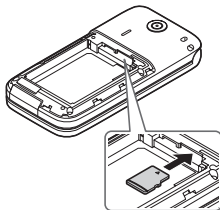

- Insert Memory Card (terminals facing down) all the way until it clicks.
- Do not insert other objects.

 
4 Insert Battery, then replace Battery Cover (P.1-3)

5 Power on

-  appears when Memory Card is inserted properly.

Removing Memory Card

- Always power off first.
- Gently push in Memory Card and release it; Memory Card pops out. Carefully remove Memory Card without bending it.


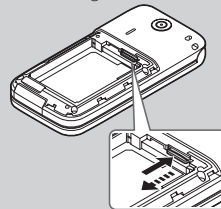


Using Memory Card

Formatting Memory Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc.

  - Formatting deletes all SD Card files.

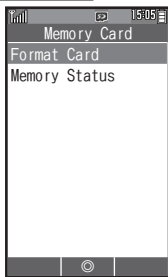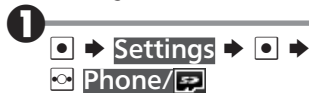


- Memory Card menu opens.



Format Card → → **Yes**



 - Offline Mode activates; signal transmission and reception are suspended until formatting is complete.

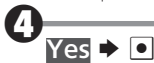

Yes →

Precaution

- Never power off or remove Battery while formatting; may damage Memory Card or handset.

 
Opening Memory Card Files



- Data Folder opens.



Change to MemoryCard

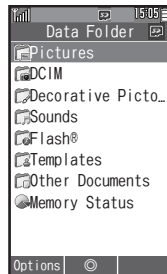

- Memory Card Data Folder opens.



Select folder →

- To open files in a subfolder, select a subfolder and press .



Select file →

 
File Backup & Restore

Back up Phone Book contacts and bookmarks to Memory Card.

■ Backup (Handset to Memory Card)

- 1 → **Settings** → → **Phone/**

- 2 **Backup/Restore** →

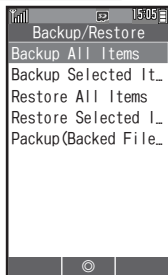

- Backup/Restore menu opens.

- 3 **Backup All Items** or **Backup Selected Items** →

- 4 **Enter Handset Code** →

→ **Yes** →

- For **Backup All Items**, follow onscreen instructions to proceed.

- 5 **Select item** → (appears)

- Repeat 5 to select both items (Phone Book and Bookmark).

- 6 → **Yes** →

- Backup starts. Follow onscreen instructions.

Precautions

- Not available if Battery is low.
- Backup may fail if Memory Card memory is low.
- Some settings may be lost, or files may not be backed up properly.

Deleting Backup Files

- In Backup/Restore menu, **Packup (Backed Files)** → → **Select item** → → **Select file** → → → **Yes** →

■ Restore (Memory Card to Handset)

- 1 In Backup/Restore menu, **Restore All Items** or **Restore Selected Items** →

- 2 **Yes** →

- For **Restore All Items**, follow onscreen instructions to proceed.

- 3 **Select item** → (appears)

- Repeat 3 to select both items (Phone Book and Bookmark).

- 4

- 5 **Select item** →

- Repeat 5 as needed.

- 6 → **Yes** →

- Restore starts. Follow onscreen instructions.