

# Setting Handset Responses

## Setting Ringtones

1

2 Sounds & Alerts



- Sounds & Alerts menu opens.

3 Ringtones

4 Select item

- For New Message, select Sound and press .

5 Preset Sounds or Sound  
→ → Select tone/file  
→

## Setting Vibration

1 In Sounds & Alerts menu,  
Vibration

2 Select item

3 On   
• To disable Vibration, select Off and press .

4 Vibration Pattern

5 Select pattern

### Vibration Caution

- Disable Vibration when placing handset on a desk, etc. to prevent it from falling off upon receiving calls/messages.

## Setting Ringtone Volume

1 In Sounds & Alerts menu,  
Volume

2 Select item

## Setting Keys to Answer Calls

1 In Sounds & Alerts menu,  
Any Key Answer

2 On, Only Mute or Off   
• Select On to answer calls with , Dialpad, etc.  
• Select Only Mute to mute ringer with , Dialpad, etc.

# Setting Operation Sounds


## Setting Key Press Sounds

1  ➔ **Settings** ➔  ➔  
 **Sound/Display**

2 **Sounds & Alerts** ➔

- Sounds & Alerts menu opens.

3 **System Sounds** ➔

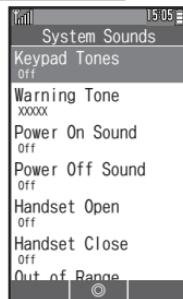

- System Sounds menu opens.

4 **Keypad Tones** ➔

5 **Select tone** ➔

- To disable key press sounds, select **Off** and press .

## Setting Sound Effects

1 In **System Sounds** menu,  
select item ➔

2 **Tone or Sound** ➔

3 **Preset Sounds or Sound**  
➔  ➔ **Select tone/file**  
➔

Disabling Sound Effect  
After ②, **Off** ➔

# Setting Display

## Setting Wallpaper

1

Settings ➤ Sound/Display

2

Display ➤



• Display menu opens.

3

Wallpaper ➤

4

Select folder ➤ Select file ➤


• Procedure may vary by folder or file. Follow onscreen instructions.

Disabling Wallpaper  
After ③, Blank ➤

## Setting Fonts

1

In Display menu, Font Settings ➤

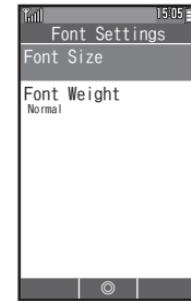

• Font Settings menu opens.

2

Font Size ➤

3

Select item ➤ Select size ➤

## Setting Font Weight

1

In Font Settings menu, Font Weight ➤

2

Select weight ➤


# Setting Sub-display

## Setting Backlight time

- 1  → **Settings** →  →  
 **Sound/Display**

- 2 **Display** →

- 3 **Sub-Display** →

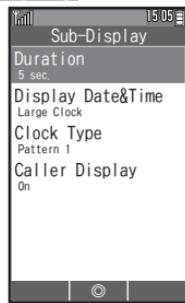

• Sub-Display menu opens.

- 4 **Duration** →  →  
**Select time** →

## Setting Clock View

- 1 In Sub-Display menu,  
**Display Date&Time** →

- 2 Select type →

## Showing/Hiding Caller Info

- 1 In Sub-Display menu,  
**Caller Display** →

- 2 **On or Off** →


# Setting Date & Time

## Setting Clock Manually

Clock is set by default. Adjust it manually as follows.

1 ➔ **Settings** ➔ ➔   
**Sound/Display**

2 **Date & Time** ➔

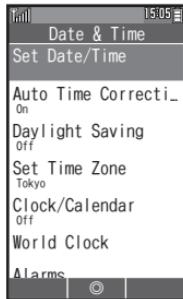

- Date & Time menu opens.

3 **Set Date/Time** ➔

4 Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔

## Setting Auto Time Correction

1 In Date & Time menu,  
Auto Time Correction ➔

2 On or Off ➔

### Note

- Date and time are corrected automatically when there is a difference of 30 seconds or more between local standard time and handset Clock.