


# Parts & Functions

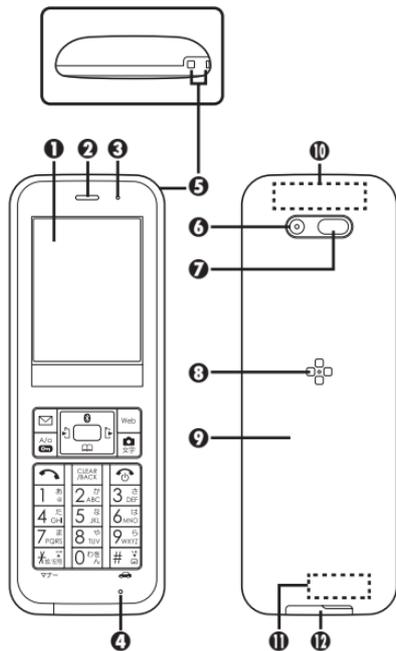

- ❶ Display
- ❷ Earpiece
- ❸ Notification Lamp
- ❹ Mic
- ❺ Strap Eyelet
- ❻ Camera (Lens Cover)
- ❼ Infrared Port
- ❽ Speaker
- ❾ Battery Cover
- ❿ Main Internal Antenna Area
- ⓫ Sub Internal Antenna Area
- ⓬ External Device Port (with Port Cover)

## Port Cover

- Close Port Cover after External Device Port use.

## Strap Eyelet


- Avoid metal Straps; may affect signal reception.

## Internal Antenna Areas

- Do not cover or place stickers/labels over Internal Antenna areas.

## Handset Keys

- Keys are indicated in this guide as shown in parentheses.
- Change assigned functions indicated \* with Set Key Shortcut.

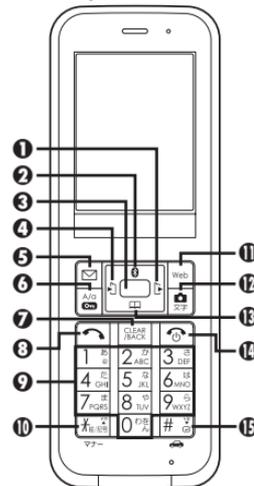

## Parts & Functions

### 1 Outgoing History Key (☎)

Open Call Log (Dialed).

### 2 Bluetooth Key (📶)

Open Bluetooth menu. Long Press to reconnect paired devices\*.

### 3 Center Key (⬇)

Open Main Menu.

### 4 Incoming History Key (☎)

Open Call Log (Received). Long Press to open profile (My Details)\*.

### 5 Mail Key (✉)

Open Messaging menu. Long Press to open E-mail composition window\*.

### 6 Lock & A/a Key (🔒)

Open Speed Dial/Mail. Long Press to activate/cancel Keypad Lock.

### 7 Clear/Back Key (⌫)

Play Answer Phone messages. Long Press to activate/cancel Answer Phone.

### 8 Start Key (📍)

Open dial window. Long Press to send location information.

### 9 Dialpad (0-9, \*, #)

Enter numbers. Long Press to open Phone Book.

### 10 X Key (✕)

Enter ✕ and P. Long Press to activate/cancel Manner mode.

### 11 Web Key (🌐)

Open Browser menu. Long Press to activate Browser (access home page)\*.

### 12 Camera & Text Key (📷)

Activate Camera. Long Press to open Camera menu.

### 13 Phone Book Key (📞)

Open Phone Book. Long Press to open contact entry window\*.

### 14 Power Key (🔌)


Show/hide Softkeys; out of Standby, cancel operations. Long Press to power off.

### 15 # Key (#)

Enter #. Long Press to active/cancel Drive mode.

## Multi Selector

📶, 🌐, 📷, and ⬇ can also be used to select menu items, word/phrase (for text entry), etc.

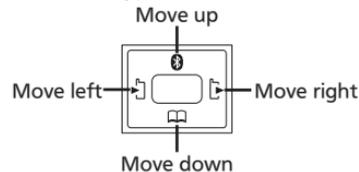

- In this guide, some Multi Selector operations are indicated as follows.

⬇	Press 📶 or 🌐
📷	Press 📷 or ⬇
🌐	Press 📶, 🌐, 📷, or ⬇


## ■ Toggling View

When a menu/list extends off Display, press # or 🌐 for hidden items.

# Inserting & Removing Battery


If Battery is not inserted into handset, insert it as follows.

## 1 Remove Battery Cover

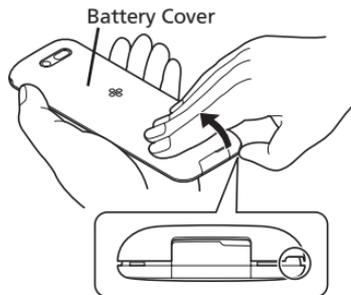



- Use notch to lift Battery Cover. Push up Battery Cover along edges to remove it.

## 2 Insert Battery

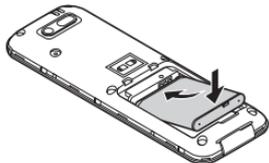

- With logo side facing up, align Battery terminals with contacts.

## 3 Replace Battery Cover

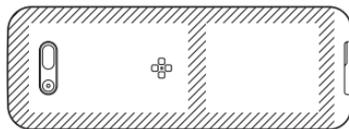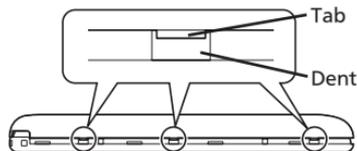


- Align dents on both sides of handset with Battery Cover tabs, then press down shaded areas of Battery Cover.

## 4 Confirm Battery Cover is closed properly

- If there is a gap between handset and Battery Cover, firmly press down Battery Cover.
- If Battery Cover is not closed properly, debris may get caught between gasket and base, allowing ingress of liquid/dust.

## Removing Battery

- Power off, remove Battery Cover, then lift Battery as shown.

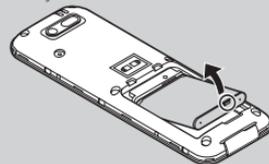

## ■ Battery Cover Cautions

- Do not apply excessive force to Battery Cover; damage may result.
- To maintain water/dust resistance, close Battery Cover properly.
- If Battery Cover is damaged, replace it with a new one. Use of damaged Battery Cover may cause electric shock, battery corrosion, etc. due to water seepage.

## Inserting & Removing Battery

---

### ■ About Battery

- Charge Battery at least once every 6 months; uncharged Battery may die or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace Battery if operating time shortens noticeably.
- Clean Battery terminals and charging terminals with a dry cotton swab or the like.
- Battery is not water or dust proof.

### Lithium-ion Battery

- Handset requires a lithium-ion battery. Lithium-ion batteries are recyclable.
- To recycle a used lithium-ion battery, take it to any shop displaying the symbol to the right.
- To avoid fire or electric shock, do not short-circuit or disassemble Battery.



Li-ion00




モバイルリサイクルネットワーク  
MOBILE RECYCLING NETWORK

# Charging Battery

AC Charger is not included in the package; purchase **WILLCOM AC Charger 01 (AC01-MU-K)** separately.


- AC Charger is not water or dust proof. Do not charge Battery while handset is wet.
- Battery can also be charged by connecting handset to a PC.

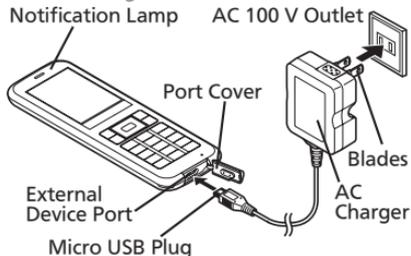


## AC Charger Cautions

- Handset/AC Charger may become warm while charging.
- Retract blades after charging. Do not pull, bend or twist cable.
- Do not use commercial chargers that allow headphone use while charging; may cause malfunction.

 - 1** Open Port Cover as shown

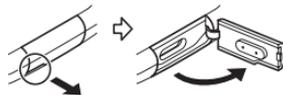


- 2** Insert Micro USB plug of AC Charger into External Device Port

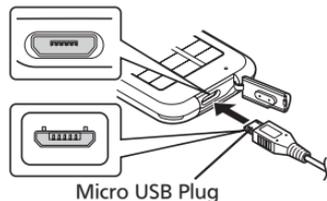

- Insert Micro USB plug in correct orientation; otherwise, External Device Port may be damaged. Confirm contours and orientation of Micro USB plug before inserting it.


- 3** Extend blades and plug AC Charger into AC outlet

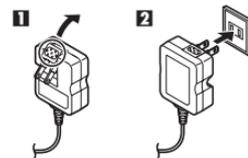

- Notification Lamp illuminates red while charging, and goes out when charge is full.

- 4** Unplug AC Charger and retract blades

- 5** Remove Micro USB plug from handset

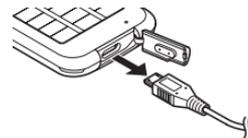

- 6** Close Port Cover firmly

- Otherwise, debris may get caught between gasket and base, allowing ingress of liquid/dust.

# Power On/Off

## 1 (Long Press)

## 2 After a while...



- Standby appears.

### Powering Off

#### (Long Press)

- After Power Off Graphics, handset shuts down.

### ■ Display Saving

Display goes completely dark after Display Saving time elapses. Press any key (except  during a call) to turn on Display again.

#### Backlight

- Backlight turns off after Time Out period elapses. Press  -  to turn it back on (key press may affect active function).
- Display goes completely dark during a call. (Backlight does not turn off first.)

### Activating Keypad Lock

Prevent accidental operation such as when carrying handset in a bag or pocket.

## 1 (Long Press)

#### When Keypad Lock is Active

- Press  to answer calls; Keypad Lock reactivates after the call.
-  does not power handset off.

#### Canceling Keypad Lock

##### (Long Press)

- When Display is turned off, press any key to turn it back on, then cancel Keypad Lock.

# Switching Interface Language to English

---

1

□ → 設定 → □ → □ 音・表示

2

Language → □

3

English → □

Switching Back to Japanese

□ → Settings → □ → □ Sound/Display

→ 言語選択 → □ → 日本語 → □

# Display & Indicators

## Standby

Most operations start from Standby. Indicators appear at the top of Display.

- For more about indicators, see P.1-9.



## Information Window

Opens at the bottom for missed calls, new mail, etc.



 
- Information label (e.g., **Message**) and count appear. Select an item and press to open it.

### Opening Unread Information



## Softkeys

Functions/operations assigned to , , and appear at the bottom of Display.

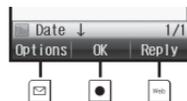

### Submenus

- When **Options** appears, press corresponding key to open submenu for related functions/settings.

## Display & Indicators

### Display Indicators

#### Basic Status



 Signal Strength*
 Battery Strength

\* More bars indicate stronger signal.

#### Function Status

 Incoming Call
 Call in Progress
 Java™ Application Active
 Java™ Application Paused

#### Notifications

 Unread Mail
 Unreceived Mail
 Answer Phone On & Message Recorded
 Answer Phone Canceled & Message Recorded
 Software Update Result

### Settings

 Offline Mode
 Answer Phone On
 Calendar/Task (Alarm Set)
 Calendar/Task (Alarm Unset)
 Alarm Set
 Manner Mode
 Drive Mode
 Original Mode
 Ringtone (Silent)
 Vibration Active
 Function Lock (Once) Active
 Keypad Lock Active
 Transmission of Location Information Active

### Transmissions


 SSL Browsing
 Packet Transmission Active
 Receiving Mail
 Updating Software
 Micro USB Cable Connected
 USB Transmission Active
 Infrared Transmission Active
 Infrared File Transfer
 Bluetooth Active
 Bluetooth Transmission Active
 Bluetooth Talk Active

#### Indicators in Standby

- Sizes and shapes of some indicators vary in Standby.

# Accessing Functions from Main Menu

1

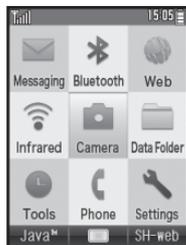

- Main Menu opens.

2

Select menu item →



- Menu/window opens.
- If submenu opens, use  to select an item and press .

## Reverse Navigation

- Press . If confirmation appears, follow onscreen prompts.

## Returning to Standby

- Press . If confirmation appears, follow onscreen prompts.

## ■ Tabs

Menus/lists in a single window appear on separate tabs; use  to toggle tabs.



Tabs

# Handset Phone Number

## 1 (Long Press)



- Handset phone number appears.  
(My Details opens.)

## Editing Profile

### 1 In My Details, **Details**

### 2 Select item



### 3 Select item **Edit**

## Sending Profile via Infrared Transmission

In My Details,  (Long Press) 

- For more about Infrared transmission, see P.9-4.

# Mobile Manners


Please use your handset responsibly. Take care not to disturb others when using handset.

- Power off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

## Manner Mode

Mute most handset function sounds.

- 1  (Long Press)

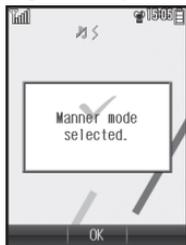

- Manner mode activates.

## When Manner Mode is Active

- Ringtones and other sounds are muted.
- Handset vibrates for incoming transmissions, etc.
- Camera shutter sound still plays at fixed volume.

## Canceling Manner Mode

- 1  (Long Press)

## Drive Mode

Disable ringtones and Vibration for incoming transmissions. The caller will be notified that you are driving and cannot answer.

- 1  (Long Press)



- Drive mode activates.

## Canceling Drive Mode

- 1  (Long Press)

## Offline Mode

Suspend signal transmission and reception.

- Handset will be unable to place/receive calls, send/receive messages, access the Internet, etc.

- 1  → **Settings** →   
→  **Network**

- 2 **Offline Mode** → 

- 3 **On** → 
  - Offline Mode activates.

## Canceling Offline Mode

- After 2, **Off** → 

# Security Codes

These codes are required for handset use.

Handset Code	9999 by default; use or change some functions.
Administrator Code	9999 by default; required for Reset Settings and Reset All.

- Do not forget Security Codes.
- Do not reveal Security Codes. We are not liable for misuse or damages.

## Incorrect Code Entry

- Message appears for incorrect code entries; retry.

## Changing Handset Code

 
Enter 4 to 8 digits.



- Locks menu opens.




- Handset Code is 9999 by default.

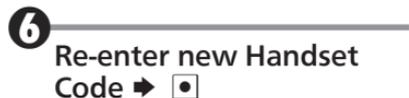

## Need/UnNeed Setting

For enhanced security, set Need/UnNeed Setting to **Need**; then Handset Code will be required to delete all files/entries, etc.

 - Guide descriptions are given assuming that Need/UnNeed Setting is set to **UnNeed**.

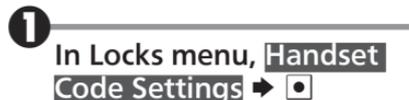

## Security Codes

---

### Changing Administrator Code

Enter 4 to 8 digits.

**1** \_\_\_\_\_

In Locks menu,  
**Administrator Setting**



**2** \_\_\_\_\_

**Register Administrator  
Code** ➔

**3** \_\_\_\_\_

Enter current  
**Administrator Code** ➔

- Administrator Code is 9999 by default.

**4** \_\_\_\_\_

Enter new Administrator  
**Code** ➔

**5** \_\_\_\_\_

Re-enter new  
**Administrator Code** ➔

# When Using Internet or Messaging for the First Time

If this is your first use of Internet or messaging, perform online sign-up to establish access to **WILLCOM** (WILLCOM's Internet connection point).

- Online sign-up also provides WILLCOM mail address.
- Transmission fees do not apply.

## Important Online Sign-up Notes

- Confirm signal strength before starting online sign-up.
- Online sign-up may be unavailable depending on your contract conditions.

1



- Browser menu opens.
- Alternatively, press to open Messaging menu and proceed.

2

**Online sign up** →

- Online sign-up window (Japanese) opens.

3

**Complete setup**

→ **これで設定を行う** →

- Online sign-up starts. Follow onscreen instructions.

## Messaging Settings on Server

- After completing first online sign-up, use online sign-up for messaging settings on Server (automatic message retrieval, rejection settings, etc.) as needed. See onscreen instructions for setting items and procedures.

## Deleting Information Provided through Online Sign-up

After ②, **Delete** → → **Yes** →

# Using Handset by Connecting with Other Devices

## Smartphone Link

Connect handset with smartphones or other mobile phones via Bluetooth® to use their call functions on handset.

- For more about Bluetooth®, see P.9-6.
- To use call functions via Smartphone Link, see P.2-6.
- See description on the right to connect with smartphones, and see P.9-6 "Connecting Bluetooth® Devices" to connect with mobile phones and other devices.

### Supported Devices

- Handset supports connection with HFP (Bluetooth® profile) compatible devices. However, some HFP compatible devices may not support Smartphone Link.

## Connecting Smartphones

Use **Assign Smartphone** to easily connect with smartphones via Bluetooth®.

- Download **PHSかんたん登録** (application for Android 4.0 or later) from Google Play™ and install it on target smartphone beforehand.
- Some smartphones may not support **Assign Smartphone**. In this case, connect them following the procedure in "Connecting Bluetooth® Devices" (P.9-6 - P.9-7).

1



Assign Smartphone



2

Yes →



- QR code appears and handset Bluetooth® is enabled.
- When handset is connected with another Bluetooth® device, confirmation appears; select **Yes** and press  to disconnect it.

3

On smartphone, activate **PHSかんたん登録**

4

Aim smartphone's Camera at QR Code on handset Display

- Handset is connected with smartphone.
- If confirmation appears, follow onscreen instructions.

## Using Handset by Connecting with Other Devices

### Checking Connection with Smartphones

Check if handset is connected (paired) with target smartphone correctly.

1



- Bluetooth settings menu opens.

2

### Device List



- Bluetooth® connection (pairing) is complete if target smartphone's name is displayed with "connect" and  is at the top of Display.

### When "unused" is Displayed

In Bluetooth menu on smartphone, tap **WX03SH** in Paired devices field

- Connection to WX03SH starts;  
**Connected** appears upon completion.