

# Setting Handset Responses

## Setting Ringtones/Ringtone Volume

### ■ Ringtones



- Sounds & Alerts menu opens.



- For For New Message, select Sound and press.
- In CLIP DISPLAY, notification sound for new messages and missed calls on smartphones can be set.



### ■ Ringtone Volume



## Setting Vibration



### Vibration Caution

- Disable Vibration when placing handset on a desk, etc. to prevent it from falling off upon receiving calls/messages.

## Setting Handset Responses

---

### Setting Keys to Answer Calls

**1** In **Sounds & Alerts** menu,  
**Any Key Answer** →

**2** **On, Only Mute or Off** →

- Select **On** to answer calls with , Dialpad, etc.
- Select **Only Mute** to mute ringer with , Dialpad, etc.

# Setting Operation Sounds

## Setting Key Press Sounds

**1**  → **Settings** →  →  **Sound/Display**

**2** **Sounds & Alerts** → 

• Sounds & Alerts menu opens.

**3** **System Sounds** → 



• System Sounds menu opens.

**4** **Keypad Tones** → 

**5** **Select tone** → 

• To disable key press sounds, select **Off** and press .

## Setting Sound Effects

**1** In System Sounds menu, select item → 

**2** **Tone or Sound** → 

**3** **Preset Sounds or Sound**  
→  → **Select tone/file**  
→ 

Disabling Sound Effect  
After **2**, **Off** → 

# Setting Display

## Setting Wallpaper

1  → **Settings** →  →  **Sound/Display**

2 **Display** → 



• Display menu opens.

3 **Wallpaper** → 

4 **Select folder** →  → **Select file** → 

• Procedure may vary by folder or file. Follow onscreen instructions.

### Disabling Wallpaper

After , **Blank** → 

## Setting Fonts

### Font Size

1 **In Display menu, Font Settings** → 



• Font Settings menu opens.

2 **Font Size** → 

3 **Select item** →  → **Select size** → 

### Font Weight

1 **In Font Settings menu, Font Weight** → 

2 **Select weight** → 

# Setting Date & Time

Clock is set by default. Adjust it manually as follows.

1



2



- Date & Time menu opens.

3



4

Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔

## Setting Auto Time Correction

In Date & Time menu, **Auto Time Correction** ➔ **On** or **Off** ➔

### Note

- Date and time are corrected upon receiving messages or accessing the Internet if there is a difference of 30 seconds or more between network time and handset Clock.