


Calling Overview


Place/receive calls to/from WILLCOM handsets, landlines and other mobiles.

- Calling charges vary depending on the other party's device type, etc. For details, contact WILLCOM Service Center.

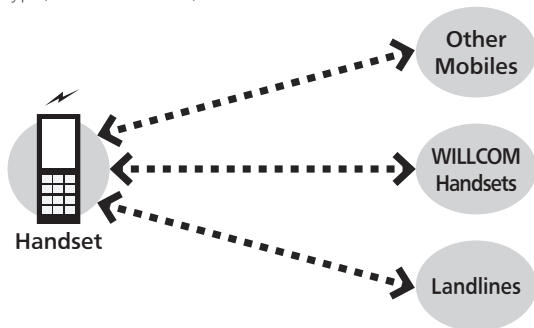

■ Smartphone Link (Connection with Other Devices)

Connect handset with smartphones or other mobile phones via Bluetooth® to use their call functions on handset (P.2-6).

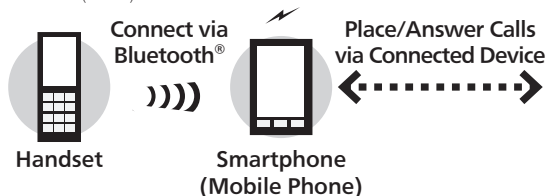


■ International Calls & Roaming

Place international calls from Japan on handset. (No separate subscription is required.)

- Handset is not available for placing/receiving calls outside Japan.

■ Signal Conditions

Confirm signal strength and battery charge beforehand.

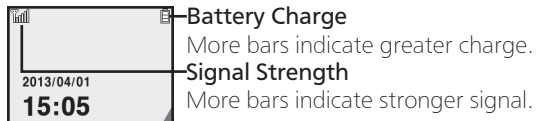

Switching to Another Antenna for Better Reception

- Follow these steps:



■ Emergency Calls (110, 119 or 118)

Emergency calls are possible regardless of state of handset settings (Function lock, Offline Mode, Drive mode, Restrict Destinations, etc.).

- After placing an emergency call, Reject Numbers and Answer Phone will be disabled for a certain period of time to accept calls from corresponding agency (e.g., police). Offline Mode, Drive mode and the call hold feature will also be disabled.

Placing Calls

- 1 Enter phone number with area code ➔ 




- Wait for receiver to accept the call.
- A tone will sound 2 hours after the call connects (as a reminder).

- 2  ➔ Call ends

Adjusting Earpiece Volume During a call,



After Calls to Unsaved Phone Numbers

- Save to Phone Book confirmation appears. Select **New Entry** or **New Detail** and press  to save phone number; new contact entry window or contact search window opens, respectively.

Dialing from Call Log

- 1  (Received) or  (Diald)



- Calls placed/received via Smartphone Link are indicated by  or .



- 2 Select record ➔ 

- 3 **PHS Call** ➔ 

- Wait for receiver to accept the call.


- 4  ➔ Call ends

Dialing from Phone Book

- 1  ➔  Select tab (hiragana row, A or *) for first character of last name



- 2 Select contact ➔ 

- 3 Select phone number ➔ 

- Wait for receiver to accept the call.

- 4  ➔ Call ends

Placing Calls

Placing International Calls

Place international calls easily through WILLCOM's international calling service.

- 1 Enter phone number ➔ 
➔ **Int'l Call** ➔ 



- Country code list appears.




- 2 Select country code ➔ 



- 3 


- Wait for receiver to accept the call.

- 4  ➔ Call ends

Direct Entry

- 1 Enter    (access number)

- 2 Enter country code (e.g.,  )

- 3 Enter phone number (with area code) ➔ 

- Omit the first 0 of the phone number except when calling some countries/regions.
- Wait for receiver to accept the call.

- 4  ➔ Call ends

Answering Calls

1 When a call arrives...



- Incoming call window opens.

2



- Call connects.
- A tone will sound 2 hours after the call connects (as a reminder).

3



→ Call ends

Adjusting Earpiece Volume
During a call,

When You Cannot Answer

■ Placing Calls on Hold

1

When a call arrives,

- Call connects while the call is on hold.
- Press to answer the call on hold.

■ Recording Caller Messages

1

When a call arrives, →

Record Message →


- Answer Phone is set.

Playing Messages

→ Select record →


Engaged Call Operations

Recording Caller Voice

- 1 During a call, 




- 2 **Voice Record** → 

- Recording starts. To stop, press .

Playing Recorded Messages

- 1 

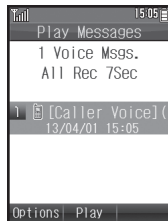

- Play Messages window opens.


- 2 **Select record** → 

Deleting Recorded Messages

After 1,  → **Delete**

→  → **Yes** → 



Deleting All Recorded Messages

After 1,  → **Delete All** →  → **Yes**



→ 

- Answer Phone messages will also be deleted.

Muting Microphone

- 1 During a call, 
 - Press  again to cancel.


Sending Touch Tone Signals

- 1 During a call, 
 - **Dial number** → 
- 2 **Enter touch tone digits**

- Touch tone signal is sent.

Sending Touch Tone Signals via Phone Book

After 1,  → **Send Tone by Phonebook** →  → **Select contact** → 

- For multiple phone numbers, select one and press .

Using Call Functions of Other Devices

On handset, place calls using the phone number of a Bluetooth® device (smartphone or other mobile phone) or answer calls placed to such a device.

- Connect handset with target device beforehand (P.1-16).

Placing Calls via Smartphone Link

1 Enter phone number with area code

2 → **Bluetooth Call** →



• Wait for receiver to accept the call.

3 → **Call ends**

Talking on Smartphone


After **2**, → **Transfer Audio** →

→ **Bluetooth Output Off** →

- Press to switch audio back to handset.

Dialing from Call Log

1 (Received) or (Dialed)

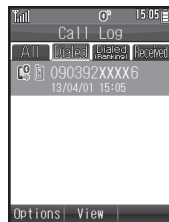

- Calls placed/received via Smartphone Link are indicated by or .

2 **Select record** → → **Bluetooth Call** →

- Wait for receiver to accept the call.

3 → **Call ends**

Dialing from Phone Book

1 → **Select tab** (hiragana row, A or *) for first character of last name



2 **Select contact** →

3 **Select phone number** → → **Bluetooth Call** →

- Wait for receiver to accept the call.

4 → **Call ends**

Answering Calls via Smartphone Link

1

When a call arrives...



- "Bluetooth Calling" appears.

2



- Call connects.

3



➔ Call ends